
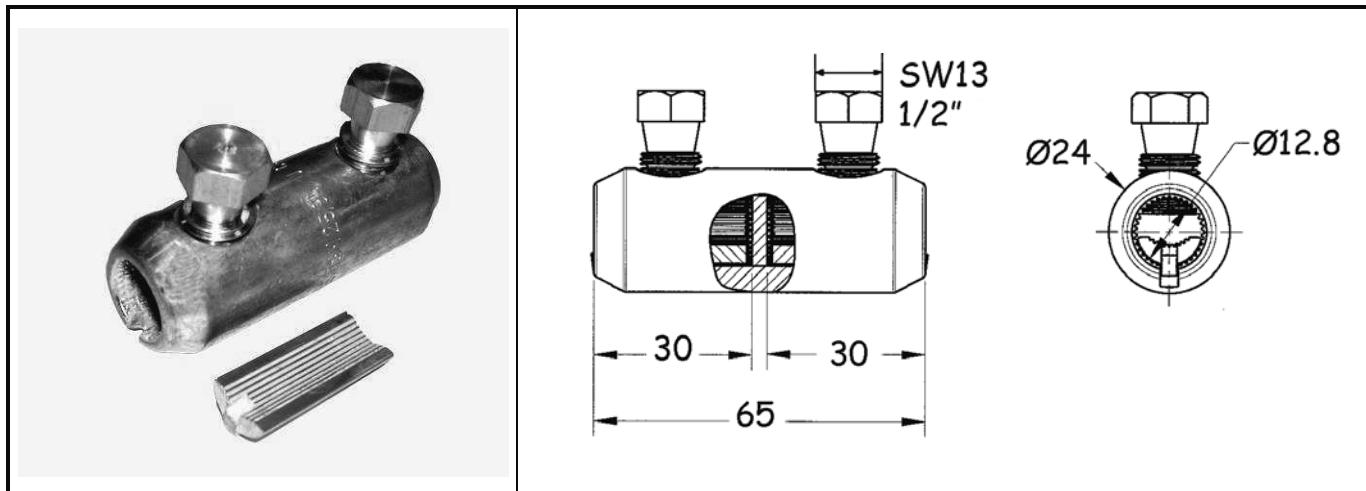
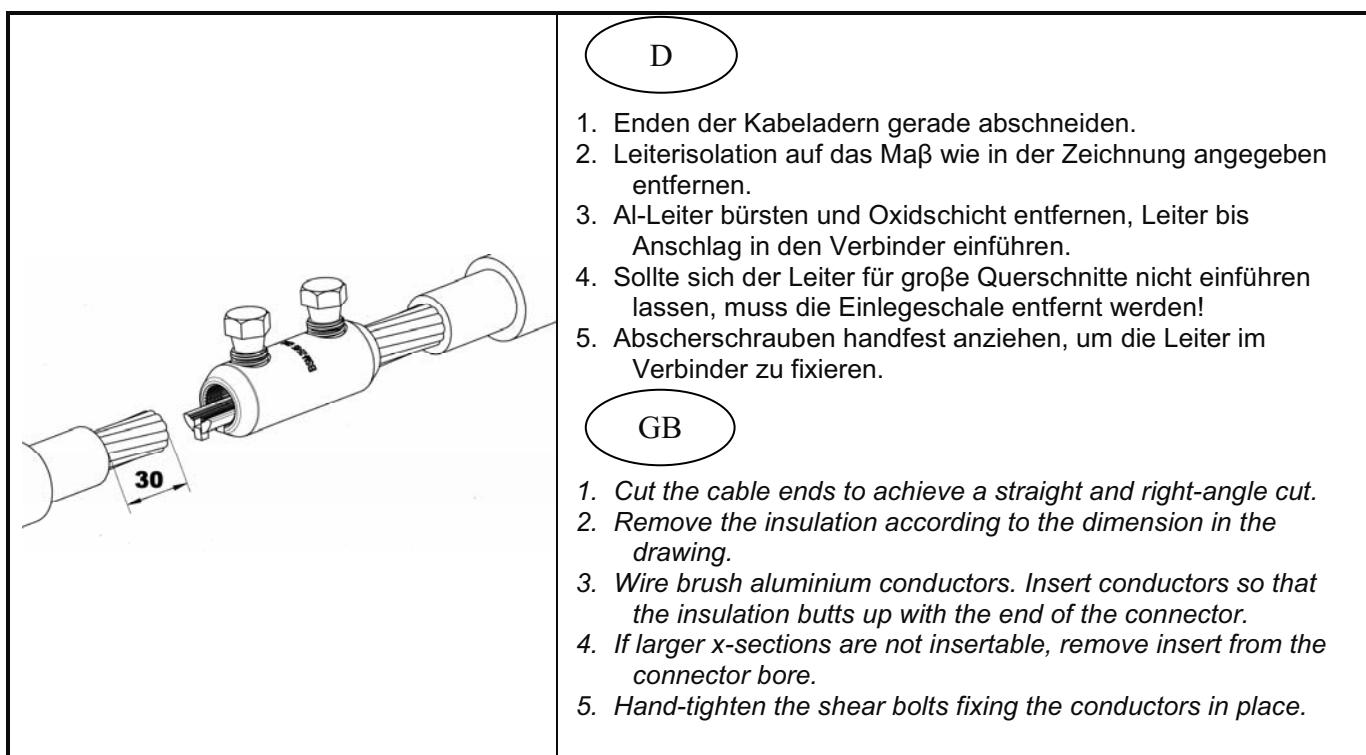


Montageanleitung
Installation Instruction
BSM-25/95
BSM-25/95-U

Anwendungstabelle
Application / Diameter range table


	AL			CU		
	RM Round Stranded	RE Round Solid	SM Sector Stranded	RM Round Stranded	RE Round Solid	SM Sector Stranded
Querschnittsbereich <i>Conductor Cross Section (mm²)</i>	25-95	25-95	25-70 (95 rundgedrückt / with rounding)	16-95	10-50	25-70 (95 rundgedrückt / with rounding)
Leiterdurchmesser <i>Conductor Diameter (mm)</i>	Ø5.7 / Ø12.5	Ø5.5 / Ø11		Ø4.8 / Ø12.5	Ø3.6 / Ø8	

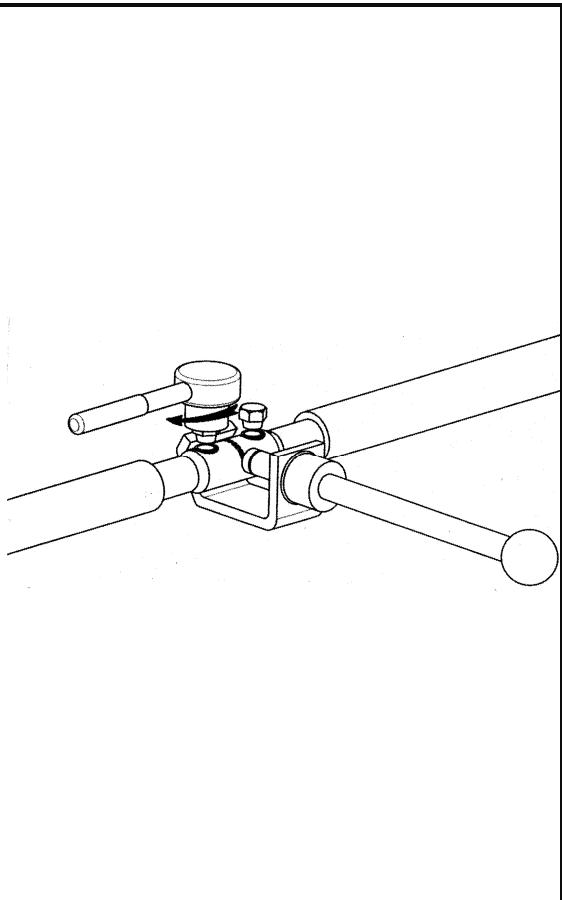

	<p style="text-align: center;">D</p> <p>6. Die Abscherschrauben mit einem Sechskantschlüssel abwechselnd in der durch die Ziffern gekennzeichneten Reihenfolge um je eine halbe Umdrehung anziehen, bis sie abreißt. Äußere Schrauben zuerst abscheren. Um ein Verbiegen der Leiter zu vermeiden, sollte der Gegenhalter IT-1000-019. Wenn ein Schlagschrauber (IT-1000-023) benutzt ist, die festziehenabstände sollten 2 Sekunden sein.</p> <p>7. Leiter und Verbinder nach der Montage ausrichten bzw. fluchten.</p> <p>8. Scharfkantige Schraubenüberstände gegebenenfalls entfernen.</p> <p style="text-align: center;">GB</p> <p>6. By half turns, alternatively tighten the shear bolts with a socket wrench following the sequence given in the drawing, until shear off. Avoid core bending by using a holding tool available as IT-1000-019. When a cordless impact wrench (IT-1000-023) is in use the tightening intervals should be in the range of 2 seconds.</p> <p>7. Re-arrange conductors after installation if required.</p> <p>8. Smooth off any sharp edges of protruding bolts where appropriate.</p>
--	--

Montagehinweis

Attention

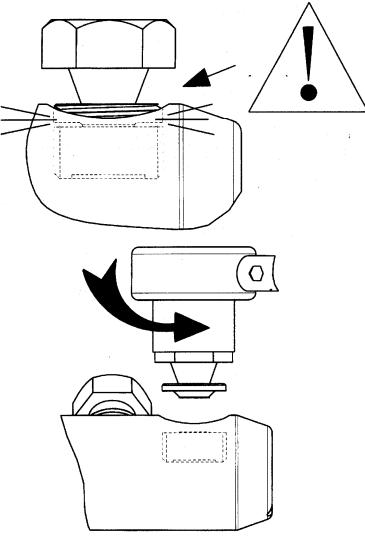	<p>In seltenen Fällen kann es vorkommen, dass die Schraube abreißt und sich der obere Gewindeteil nicht aus dem Verbinderkörper entfernen lässt.</p> <p>Der Schraubenkopf kann dann in entgegengesetzter Richtung entfernt werden. <u>Die Funktion ist nicht beeinträchtigt.</u></p> <p><i>It could be possible that a bolt shears and the top section is retained in the connector.</i></p> <p><i>It is possible to remove the top section of the screw from the connector body by unscrewing the bolt head. This is a characteristic of multi-shear bolts and <u>does not affect the performance.</u></i></p>
---	---

Tyco Electronics Simel S.A.S.
A TE Connectivity Ltd. Company
TE Energy
1 rue Paul Martin
21220 Gevrey-Chambertin, France
Phone : ++33(0)3 80 58 32 00
Fax : ++33(0)3 80 34 10 15

The information contained in this installation instruction is for use only by installers trained to make electrical power installations and is intended to describe the correct method of installation for this product. However, TE has no control over the field conditions which influence product installation. It is the user's responsibility to determine the suitability of the installation method in the user's field conditions. TE's only obligations are those in TE's standard Conditions of Sale for this product and in no case TE will be liable for any other incidental, indirect or consequential damages arising from the use or misuse of the products.

SIMEL, TE connectivity (logo) and TE Connectivity are trademarks of the TE Connectivity Ltd. Family of companies.